Media Cart

5129: GA-OS-MC-NB
5141: GA-OS-MC-CO

Congratulations on the purchase of your Media Cart. This mdeia cart has been crafted to the highest standards of quality and safety and will give you many years of enjoyment and practical use.

Since this media cart is a natural wood product, there will be variations in color and grain, and minor checking may occur. This is normal and does not compromise the integrity of your media cart. In fact, variation in character of solid hardwood is integral to the beauty and appeal of hardwood furniture, and distinguishes it from prefabricated, synthetic and composite materials.

On this insert you will find a list of the hardware and parts included as well as detailed assembly instructions. Assembly is quite simple and requires only a Phillips head screwdriver. Assembly will be most easily accomplished if you take the time to carefully sort the hardware and familiarize yourself with the function of each piece.

If you need assistance with assembly, part replacement, or any other matter, please contact the toll-free Epoch Design Customer Service Team from Monday through Friday, 9 AM-6PM PST at 1 (800) 589-7990. You may also email your request or comments to info@epochbydesign.com and a customer service representative will respond.

Thank you and Enjoy

HARDWARE LIST

10 **Camlock connectors pins**	2 **Caster wheels with locks** 	2 **Caster wheels** 
10 **Camlocks**	29 **15mm wood screws**	2 **Hinges pins**
6 **40mm bolts**	1 **Rubber ring** 	1 **Key**

PARTS

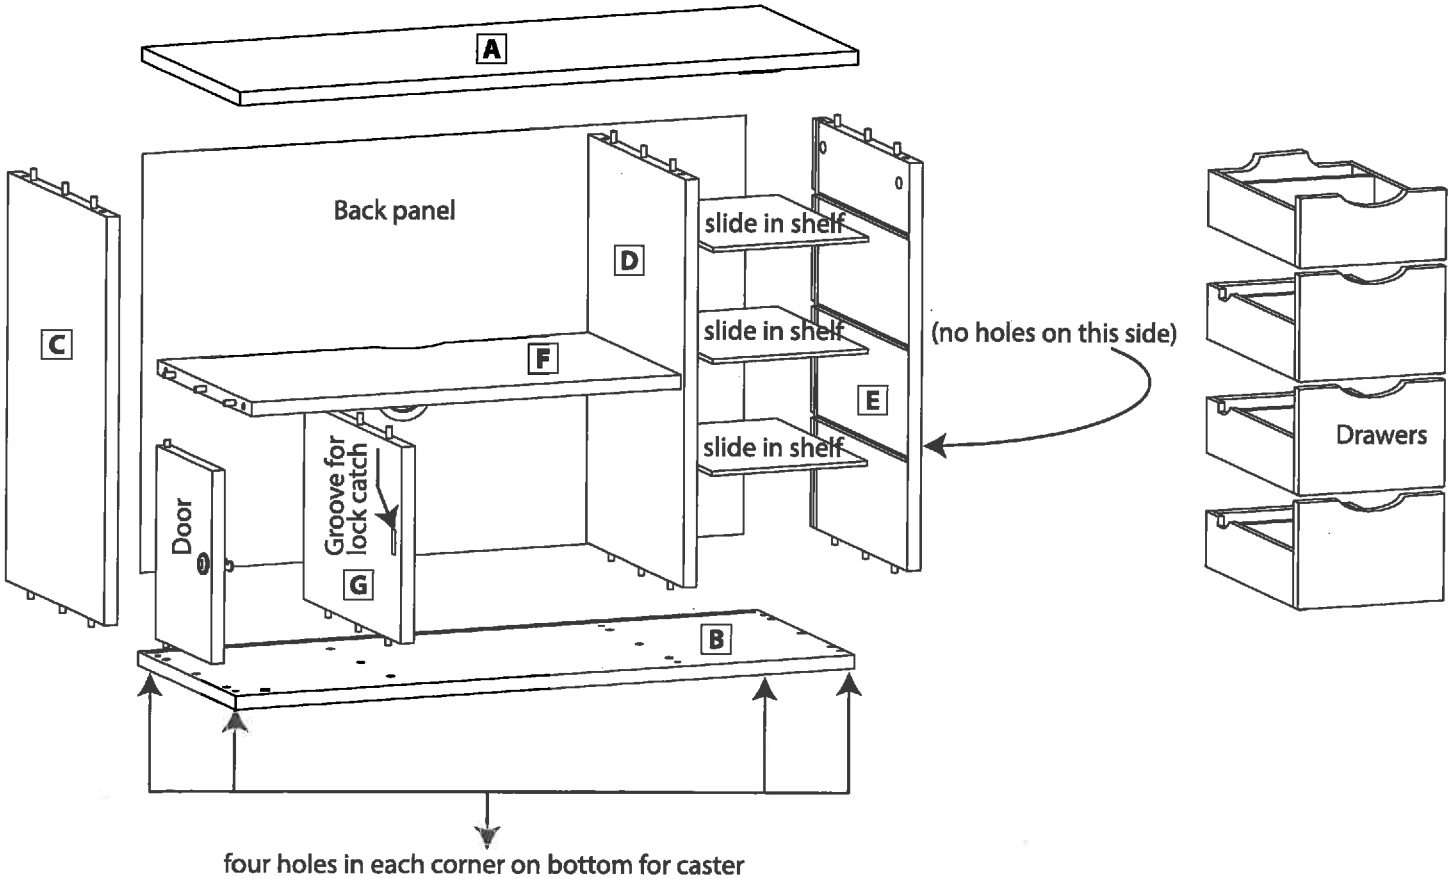

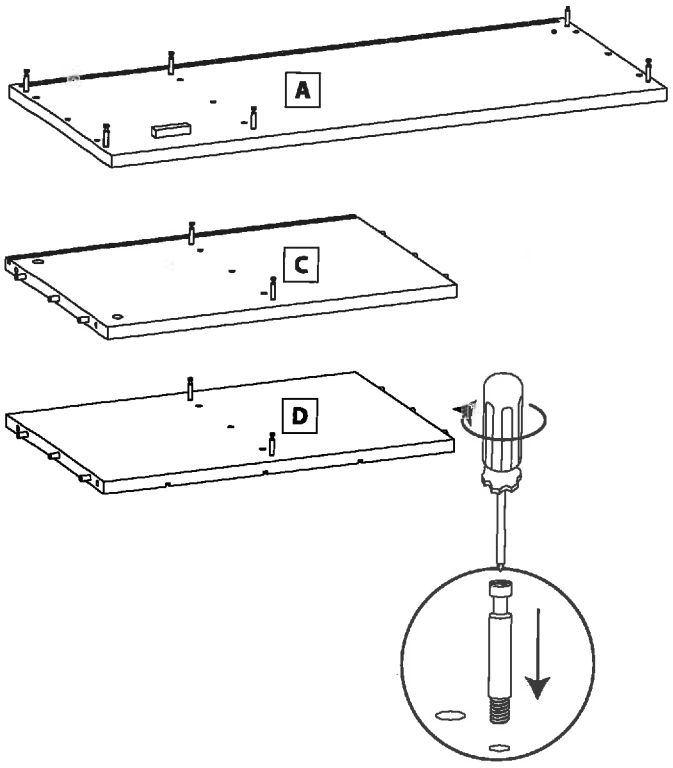

1) Locate panels A C D and 10 camlock connector pins. Attach each pin with Phillips head screwdriver.

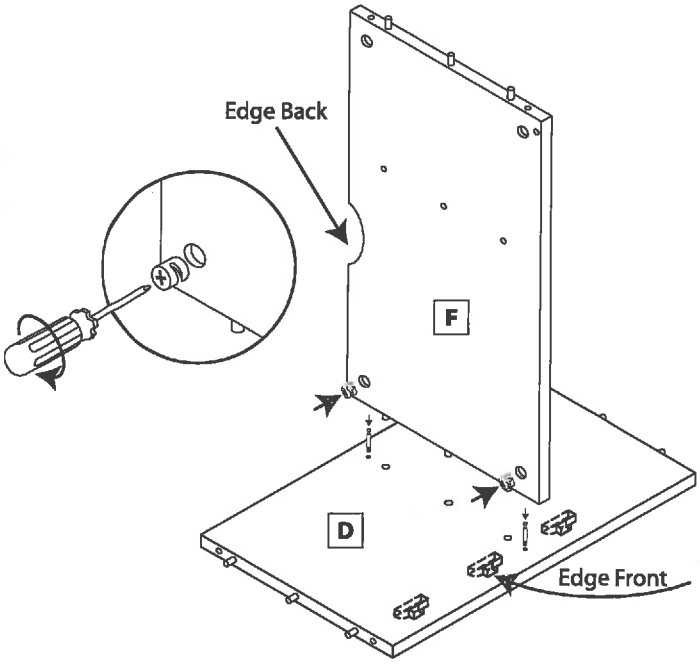

2) Place panel D on soft surface and locate panel F. Attach each panel so the finished edges match up. Insert the pins into the corresponding holes in the panel F. Secure panels by inserting one camlock into each of two corresponding holes on panel F. Turn each camlock about 1/4 turn or until gap between panels is gone. Do not over-tighten. It will damage the material.

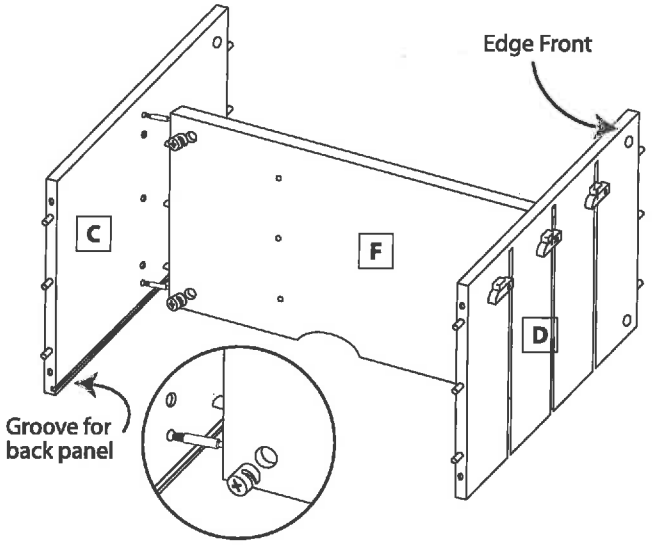

3) Attach F to C.

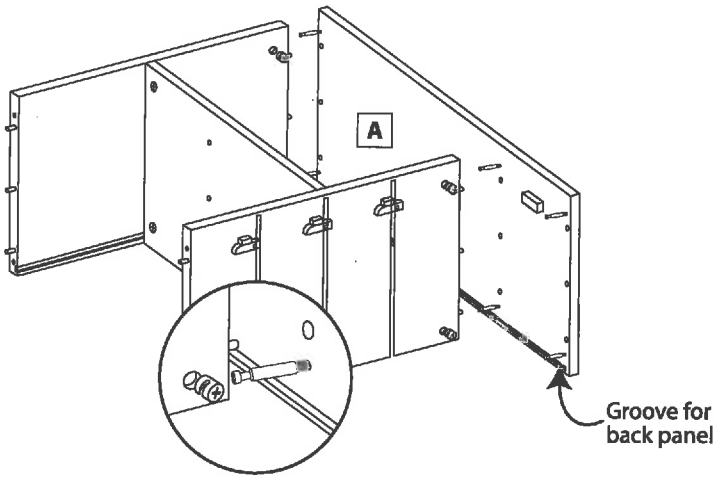

4) Locate panel A and join to the assembly in the same way as in the step 3. Use four camlocks.

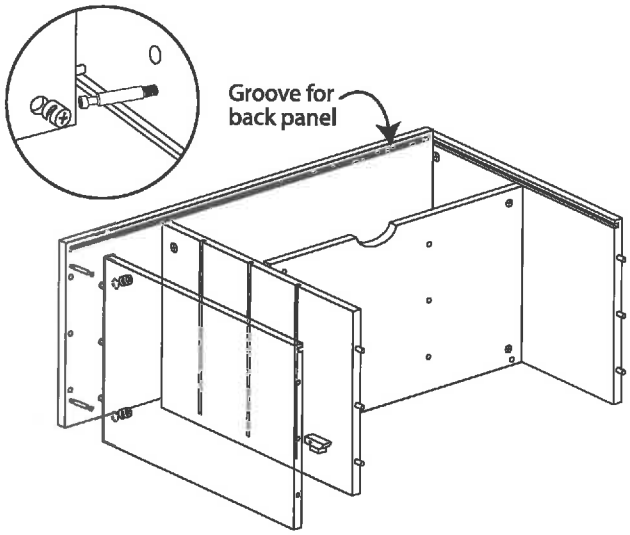

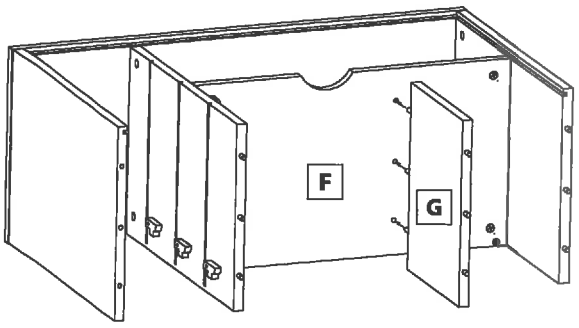

5) Attach G.

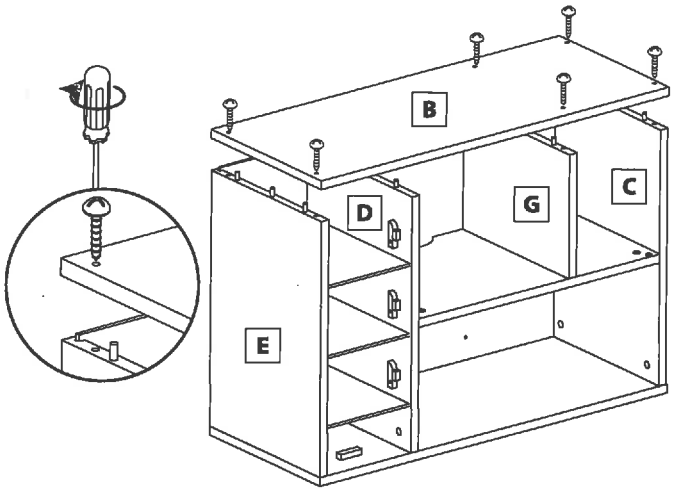

8) Use 15mm wood screws to attach B.

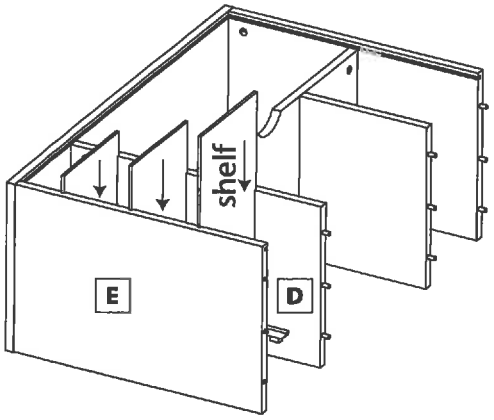

6) Attach slide in shelf.

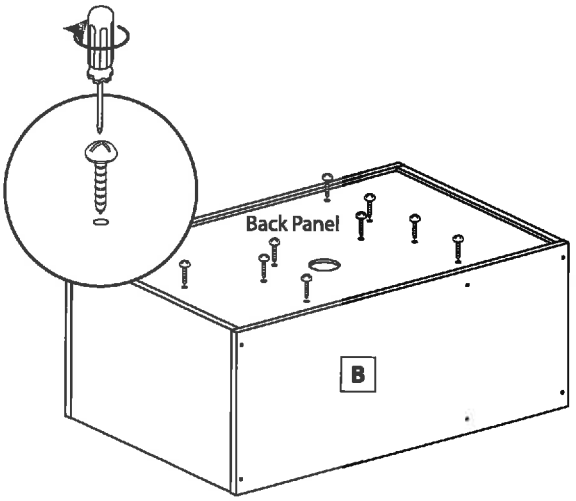

9) Use 15mm wood screws to attach back panel.

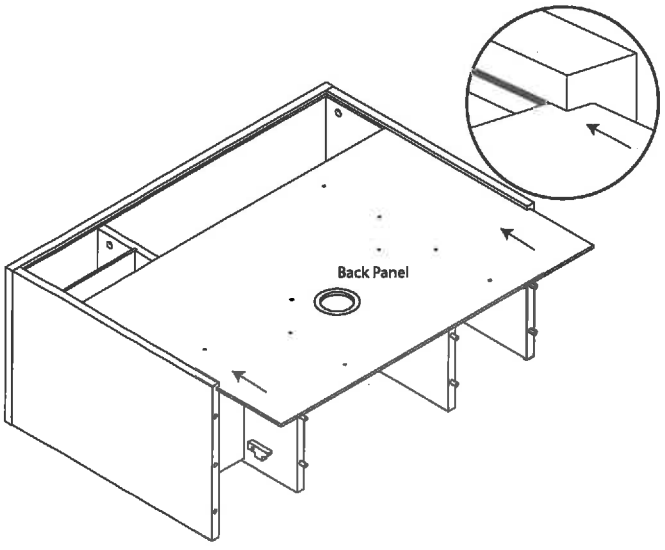

7) Attach the back panel. Make sure it slides into the groove.

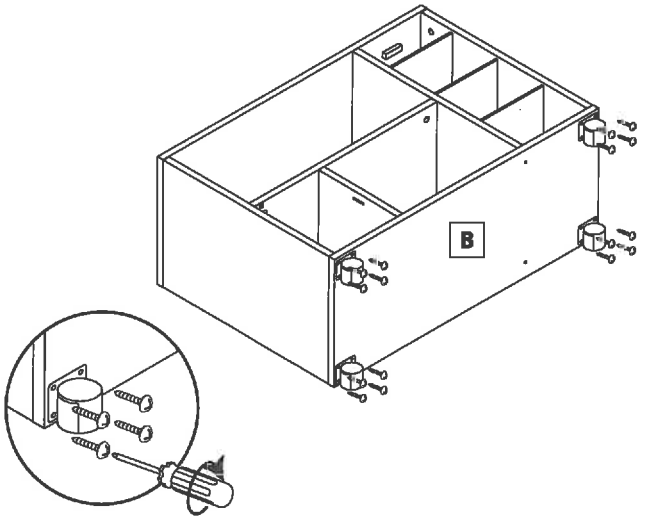

10) Use 15mm wood screws for attaching wheels.

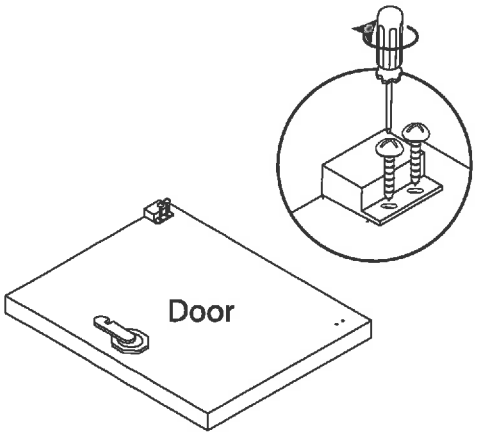

11) Use 15mm wood screws to attach hinges pin.

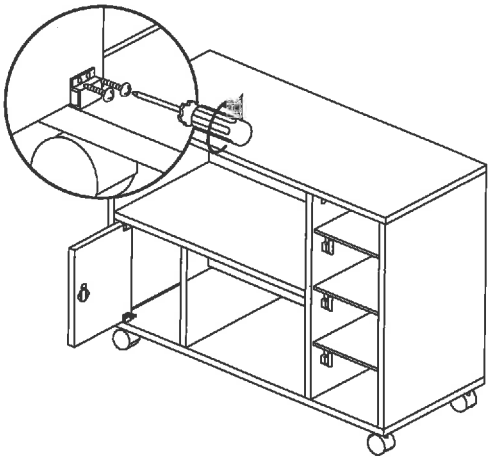

14) Use 15mm wood screws to attach the bottom hinges pin.

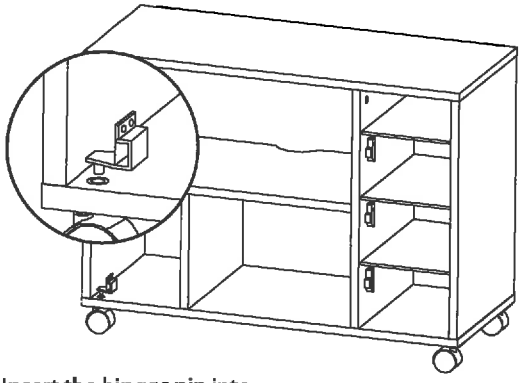

12) Insert the hinges pin into the hole.

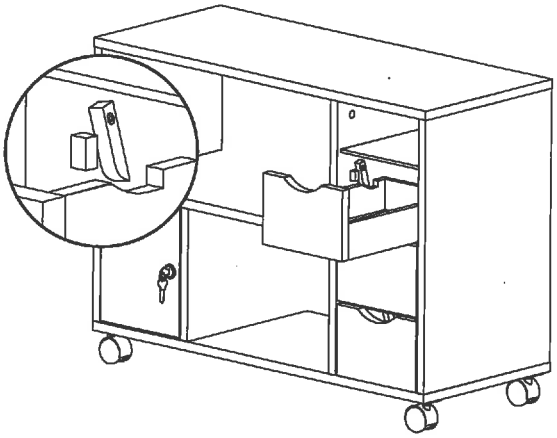

15) Set the assembly on its wheels and locate the three big drawers. Insert the three drawers in the bottom three slots. **Note:** The wood drawers stops will swing out of the way when the drawers are inserted

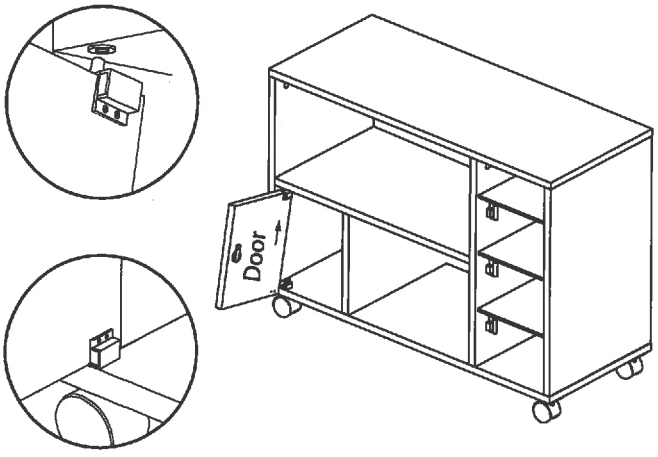

13) Attach the door by sliding the top hinges pin into the hole.

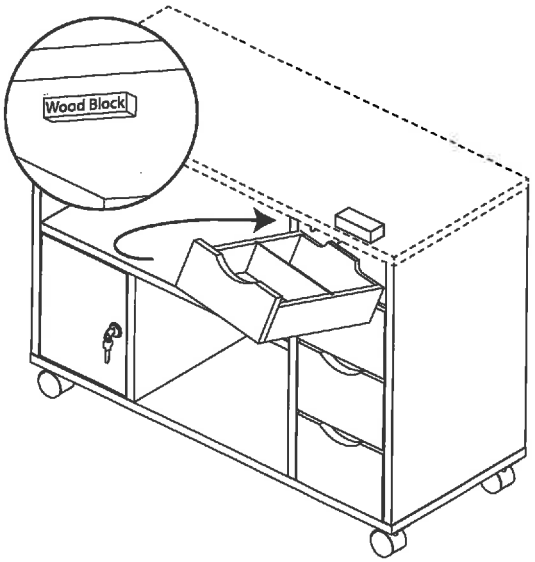

16) Locate the small drawer. It should be inserted at an angle so it will clear the wood block under the top panel. Tip the drawer up and slide it in until the tab on the drawer clears the wood block. Return the drawer to horizontal and finish insertion.