

Parkrose Platform Bed

5462: PK-QU-PB-ES, 5463: PK-FU-PB-ES,
5467: PK-KI-PB-ES

Congratulations on the purchase of your Parkrose Platform Bed. This bed has been crafted to the highest standards of quality and safety and will give you many years of enjoyment and practical use.

On this insert you will find a list of the hardware and platform bed parts as well as detailed assembly instructions. Assembly is quite simple and requires only a flat head screwdriver and a Phillips head screwdriver. The use of a power drill with the clutch set to low and a Phillips head attachment is helpful but not necessary. Assembly will be most easily accomplished if you take the time to carefully sort the hardware and familiarize yourself with the function of each piece.

If you need assistance with assembly, part replacement or any other matter, please contact the toll-free Epoch Design Customer Service Team from Monday through Friday, 9 AM-5 PM PST at 1 (800) 589-7990. You may also email your request or comments to info@epochbydesign.com and a customer service representative will respond.

Thank you and Enjoy

HARDWARE LIST



70 mm bolts

Used to connect drop supports to center supports

1x FULL 1x QUEEN
4x KING



30 mm slat screws

Used to secure slats to rails

36x FULL 39x QUEEN
52x KING



Barrel nuts

Used to secure 70 mm bolts


1x FULL x1 QUEEN
4x KING



15 mm wood screws


Used to secure center support

4x FULL 4x QUEEN
8x KING

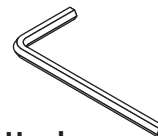

1x Hex key
Used to tighten bolt hardware


Guide



BED PARTS


2x Side rails

Connect end boards

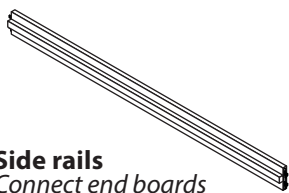

1x Slat bundle


Rest on side rails and supports mattress (strap side down)



Drop supports


Used to attach center support

1x FULL 1x QUEEN
4x KING




FULL / QUEEN

KING

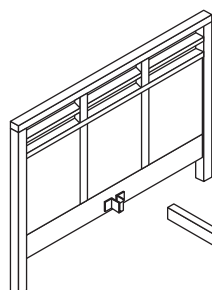


1x Headboard

1x Center support
Used to attach drop support

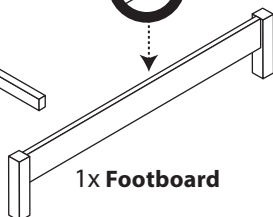

1x Footboard

1x Headboard

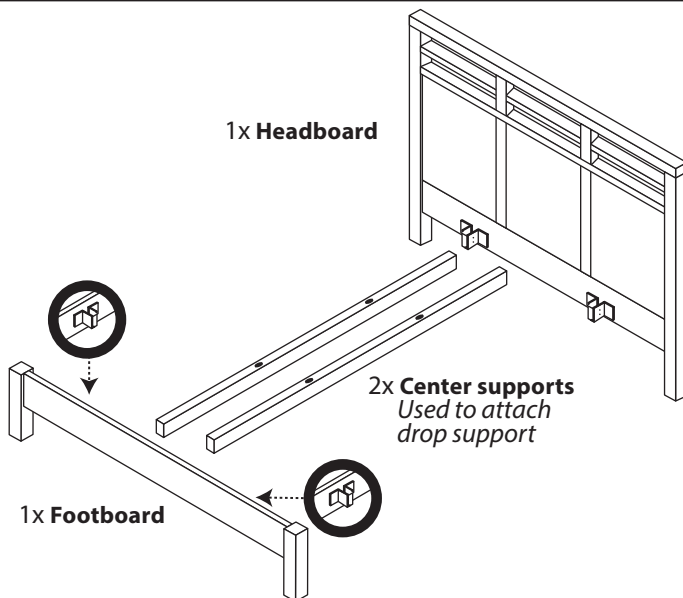

2x Center supports
Used to attach drop support



1x Footboard

HAVE QUESTIONS OR CONCERNS? CALL US FIRST: 1-800-589-7990


Copyright © 2018 Epoch Design™ All rights reserved

1

Slide one rail into the grooves of the headboard. Make sure the slat rail is facing the inside of the bed. Repeat this process with the other side rail.

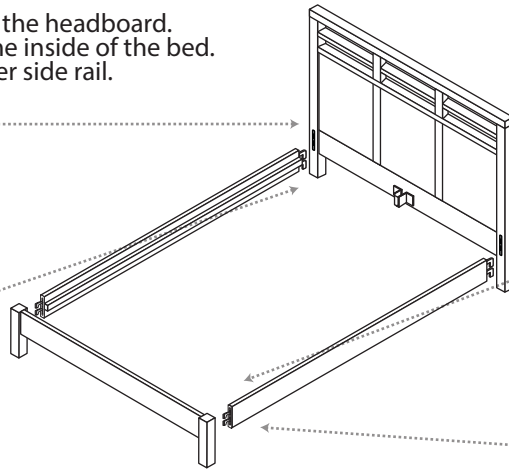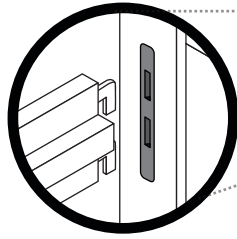



Next, do the same with the other end of the rails into the footboard.

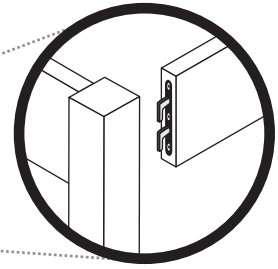

Then tap the top of the rail ends gently with a rubber mallet to make sure the connections are secure.

2


Attach the drop support to the center support by placing the barrel nut into the hole in the side of the drop support. Then insert a 70mm bolt through the center support into the barrel nut and tighten with the Hex key provided.

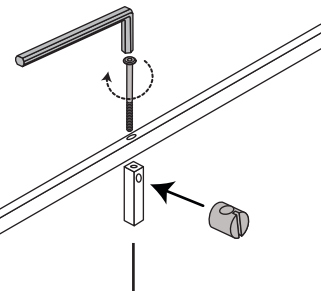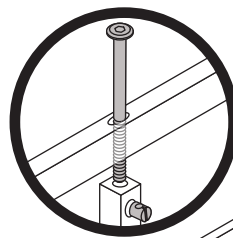



3

Insert the center support into the bottom of the brackets. Drive two 15 mm wood screws through the holes in the side of the headboard bracket with a Phillips Head screwdriver.

Then drive another two wood screws through the holes in the opposite side of the footboard bracket into the end of the center support.

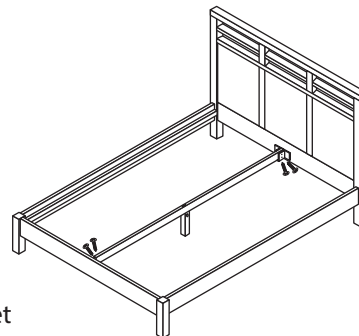

FULL & QUEEN

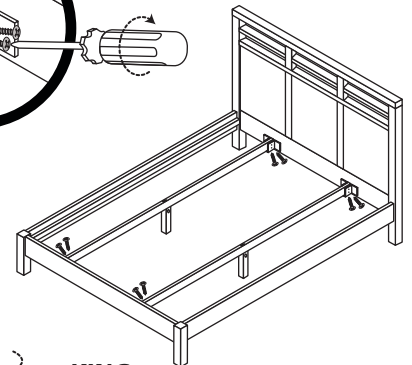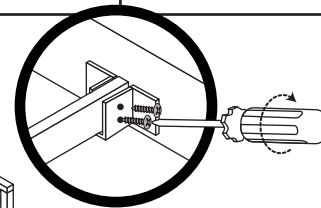


KING



4

Spread the slat bundle (strap side down) evenly across the side rails.

Use the 30mm wood screws to secure all slats to the side rails with a Phillips Head screwdriver.

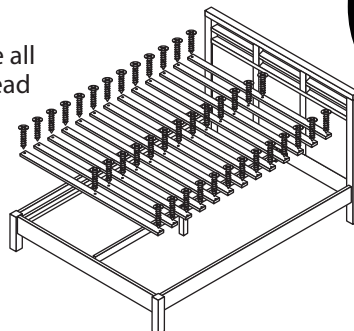

FULL & QUEEN

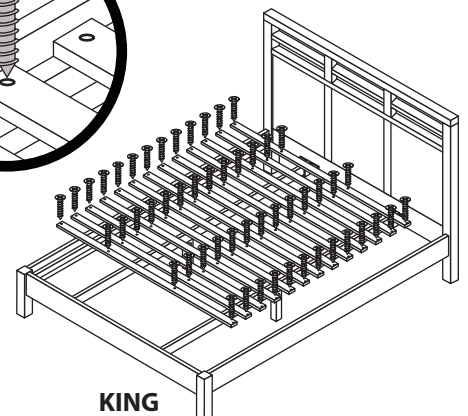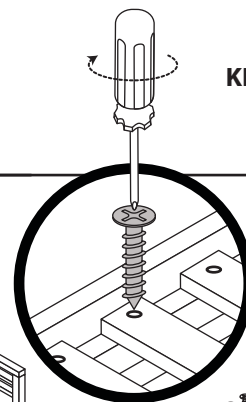

KING