

Peyton Storage Trundle Platform Bed

5149: PN-FU-XB-ES


Congratulations on the purchase of your Peyton Storage Trundle Platform Bed. This bed has been crafted to the highest standards of quality and safety and will give you many years of enjoyment and practical use.

On this insert you will find a list of the hardware, platform bed and trundle parts as well as detailed assembly instructions. Assembly is quite simple and requires only a flat head screwdriver and a Phillips head screwdriver. The use of a power drill with Phillips head attachment is helpful but not necessary. Assembly will be most easily accomplished if you take the time to carefully sort the hardware and familiarize yourself with the function of each piece.

HARDWARE LIST



16x 35mm bolts
Used to connect front & back panels




48x 30mm slat screws
Used to secure slats to rails



98x 20mm wood screws
Used to attach wheels, bottom planks & bottom panels



4x 15mm wood screws
Used to secure center support




1x Hex key
Used to tighten bolt hardware



6x Wire Retainers




4x Wooden Dowels




9x Non Marring Wheels


PARTS

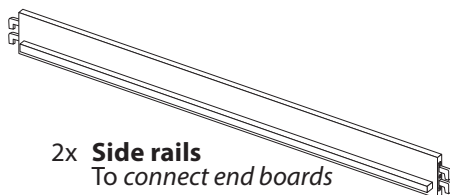


2x Side rails
To connect end boards

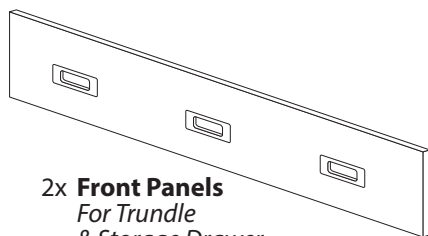


2x Front Panels
For Trundle & Storage Drawer

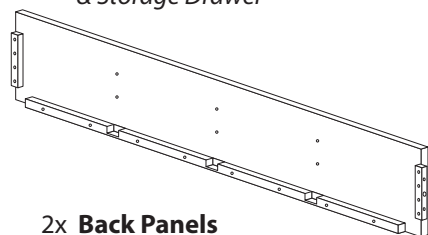


2x Back Panels
For trundle and storage drawer

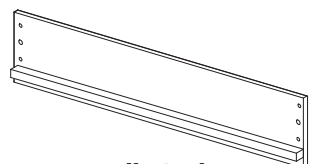

2x Trundle Bed End Panels (Long)

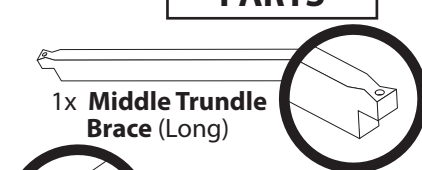


1x Middle Trundle Brace (Long)

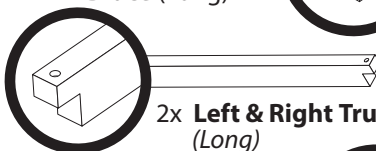


2x Left & Right Trundle Brace (Long)




2x Left & Right Drawer Brace (Short)

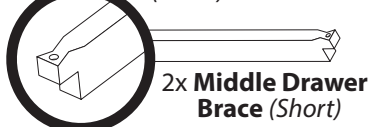


2x Middle Drawer Brace (Short)

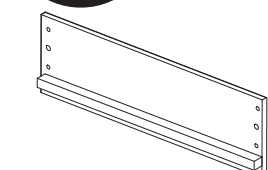


2x Storage Drawer End Panels (Short)

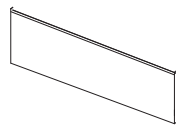


2x Storage Drawer Dividers (Short)

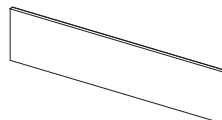

1x Trundle Divider (Long)

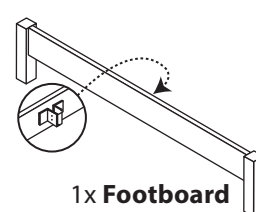


1x Footboard

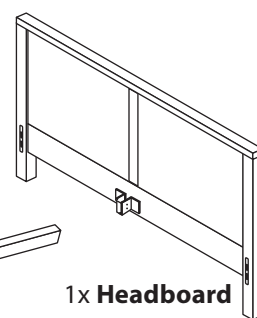


1x Headboard




1x Center Support




1x Slat bundle
Rest on side rails and supports mattress (strap side down)



2x Storage Drawer Bottom Planks (Left & Right)



1x Trundle Bottom Plank (center)



2x Trundle Bottom Planks (Left & Right)

If you need assistance with assembly, part replacement or any other matter, please contact the toll-free Epoch Design Customer Service Team from Monday through Friday, 9 AM-5 PM PST at 1 (800) 589-7990. You may also email your request or comments to info@epochbydesign.com and a customer service representative will respond.


Thank you and Enjoy

HAVE QUESTIONS OR CONCERNS? CALL US FIRST: 1-800-589-7990

Copyright © 2018 Epoch Design™ All rights reserved


PLATFORM BED

- 1** Make sure the slat rail is facing the inside of the bed then slide one rail into the grooves of the headboard (A). Repeat this process with the other side rail.

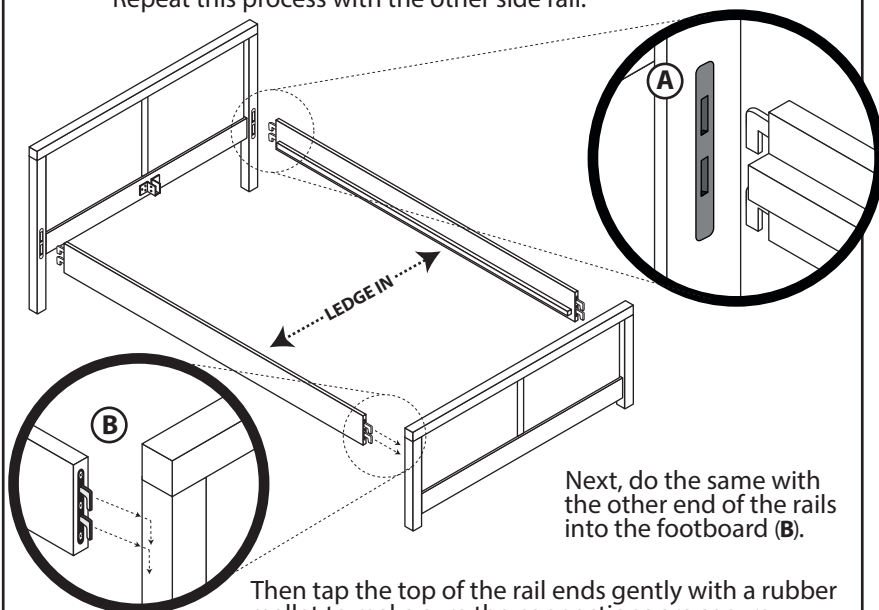


NOTE: If bedrail hook bracket does not drop fully down into the head/footboard bracket, adjust the hook bracket on the bedrail end by loosening the three screws one half turn each.

- 3** Unroll slat bundle (strap side down) onto side rail ledges evenly from end to end. Using the slat screws provided, screw the slat closest to the headboard to the two outside slat rails.

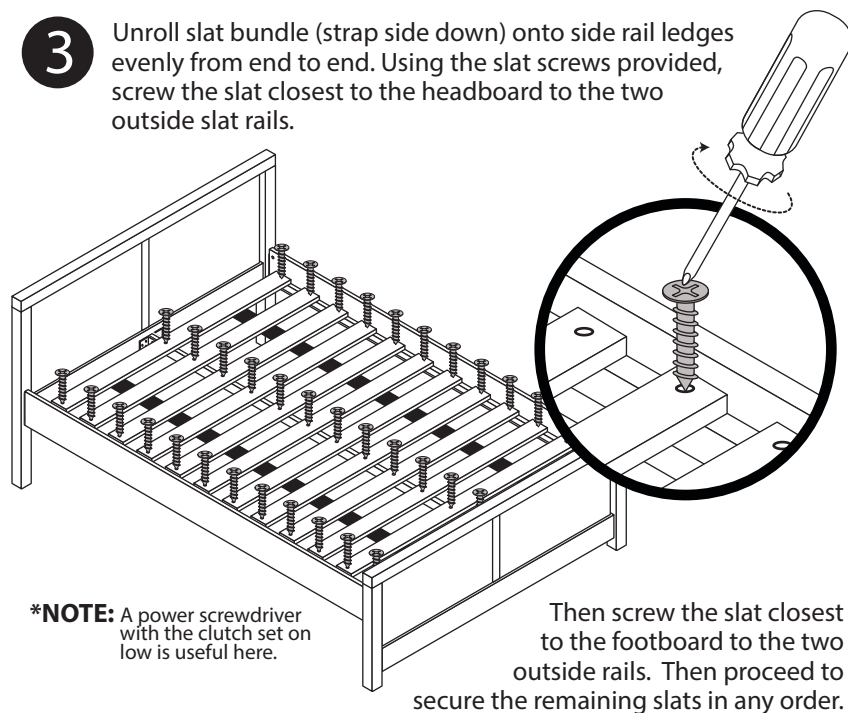


2

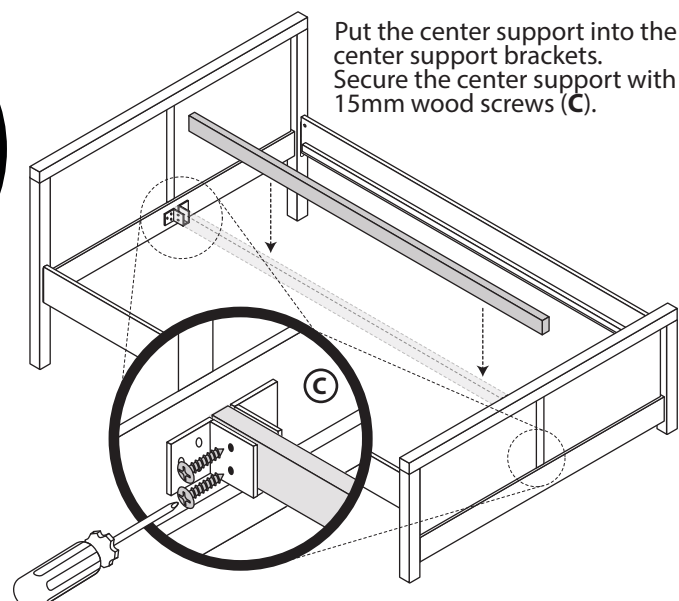


TRUNDLE BED

4


- Attach long end panels to the front and back panels with wooden dowels. (D) Use 35mm bolts to tighten the long end panels with the front and back panel (E).

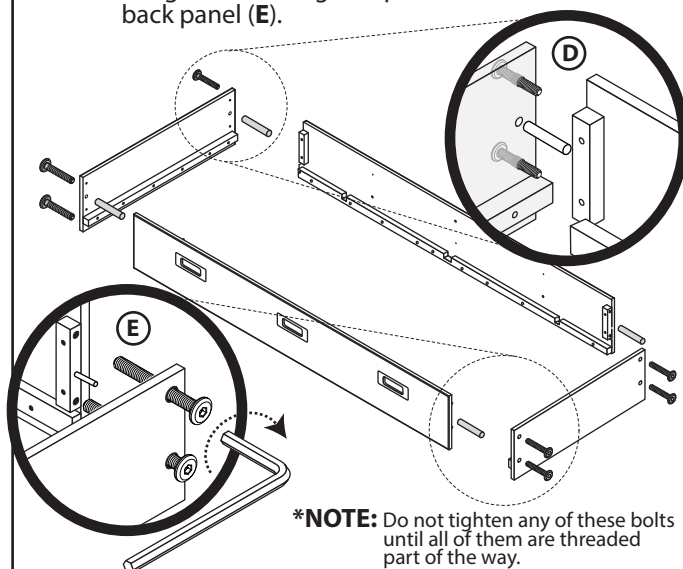

- 5** Attach the long plank braces and long middle plank brace to the trundle with 30mm wood screws.

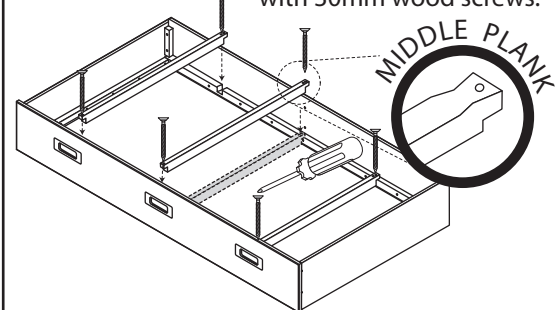


6

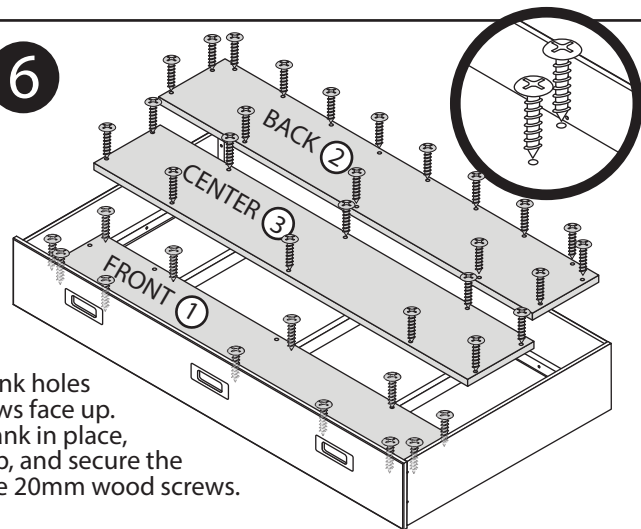


First slide the front & back bottom planks into place with the countersunk holes for the 20mm wood screws face up. Then place the center plank in place, counter sunk hole side up, and secure the planks into place with the 20mm wood screws.

- 7** Carefully flip the trundle over and place it on a soft surface such as a blanket or carpet to prevent scratching of your new drawer. Attach wheels with four 20mm wood screws per wheel as shown. (Diagram F).

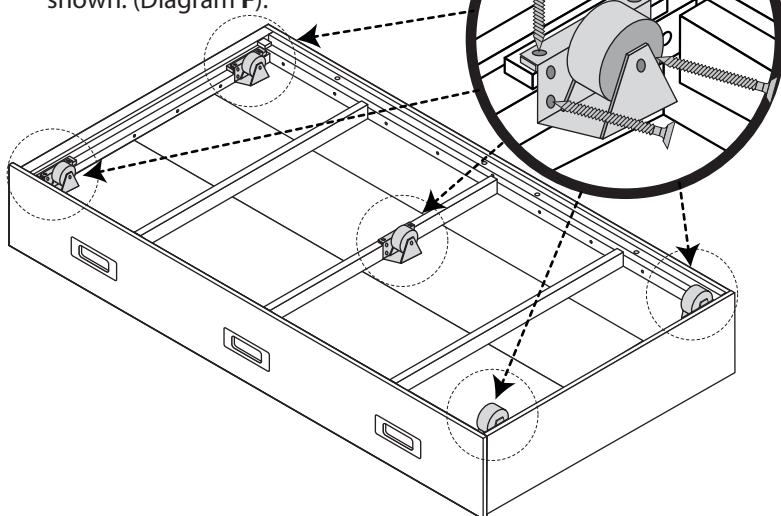


8 OPTIONAL STORAGE

To use the trundle bed as a storage drawer, simply remove the mattress, insert the wire retainers on both sides of the trundle (Diagram G), and slide the drawer divider down the grooves on the divider into the wire retainers.

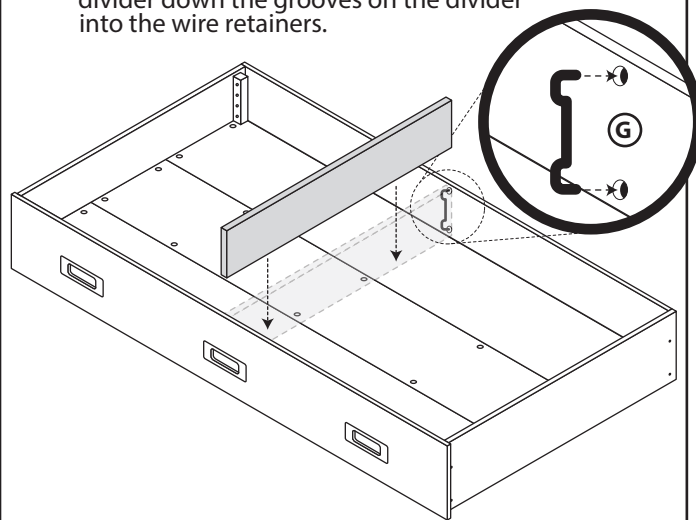


STORAGE DRAWER


- 9** Attach short end panels to the front and back panels with wooden dowels. (Diagram H) Use 35mm bolts to tighten the short end panels with the front and back panel (Diagram I).

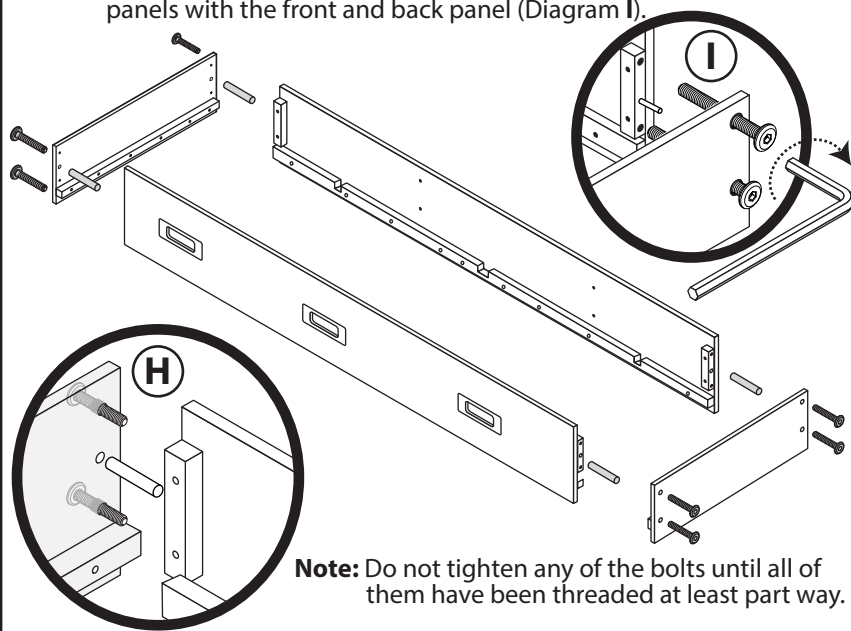


- 10** Attach the short plank braces and short middle plank brace to the trundle with 30mm wood screws.

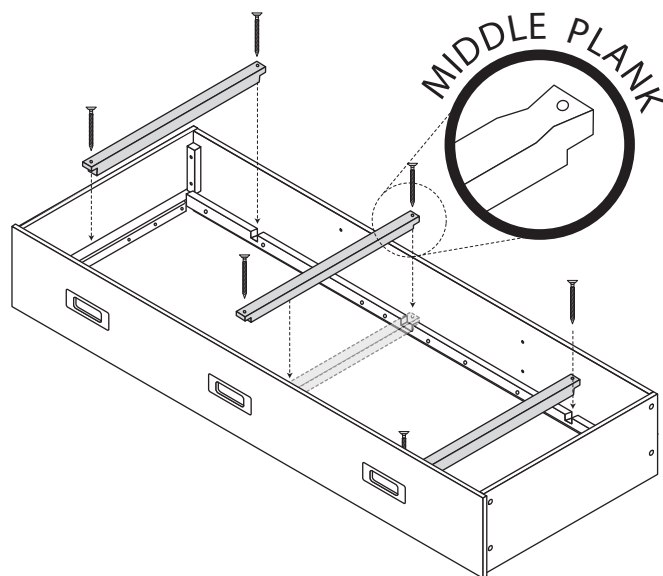

- 11** Lay the bottom planks into the storage drawer.

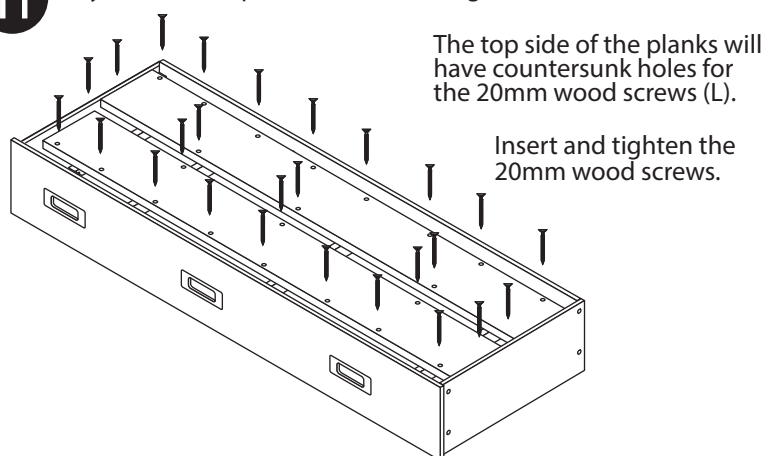


- 12** Carefully flip the storage drawer over and place it on a soft surface (such as a blanket or carpet).

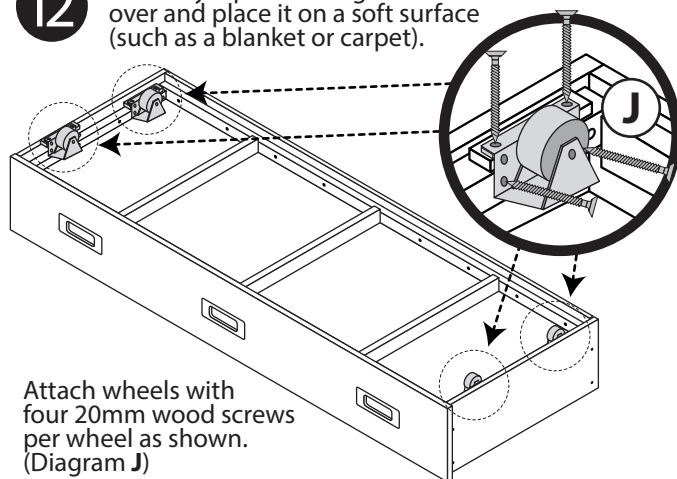


13

OPTIONAL COMPARTMENTALIZED STORAGE

To compartmentalize the storage drawer, simply add the wire retainers and the wooden dividers as you wish in order to achieve your desired size storage area (See Diagram K).

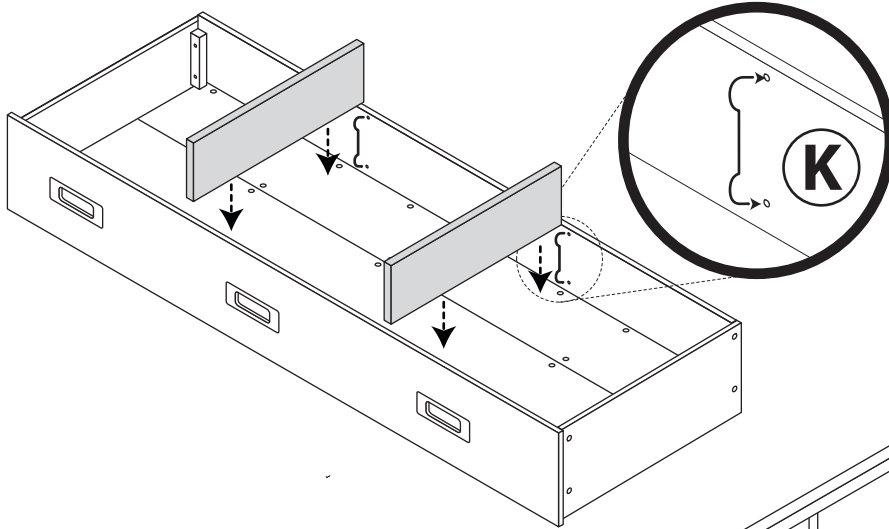

Place your storage drawer and trundle drawer under your platform bed.

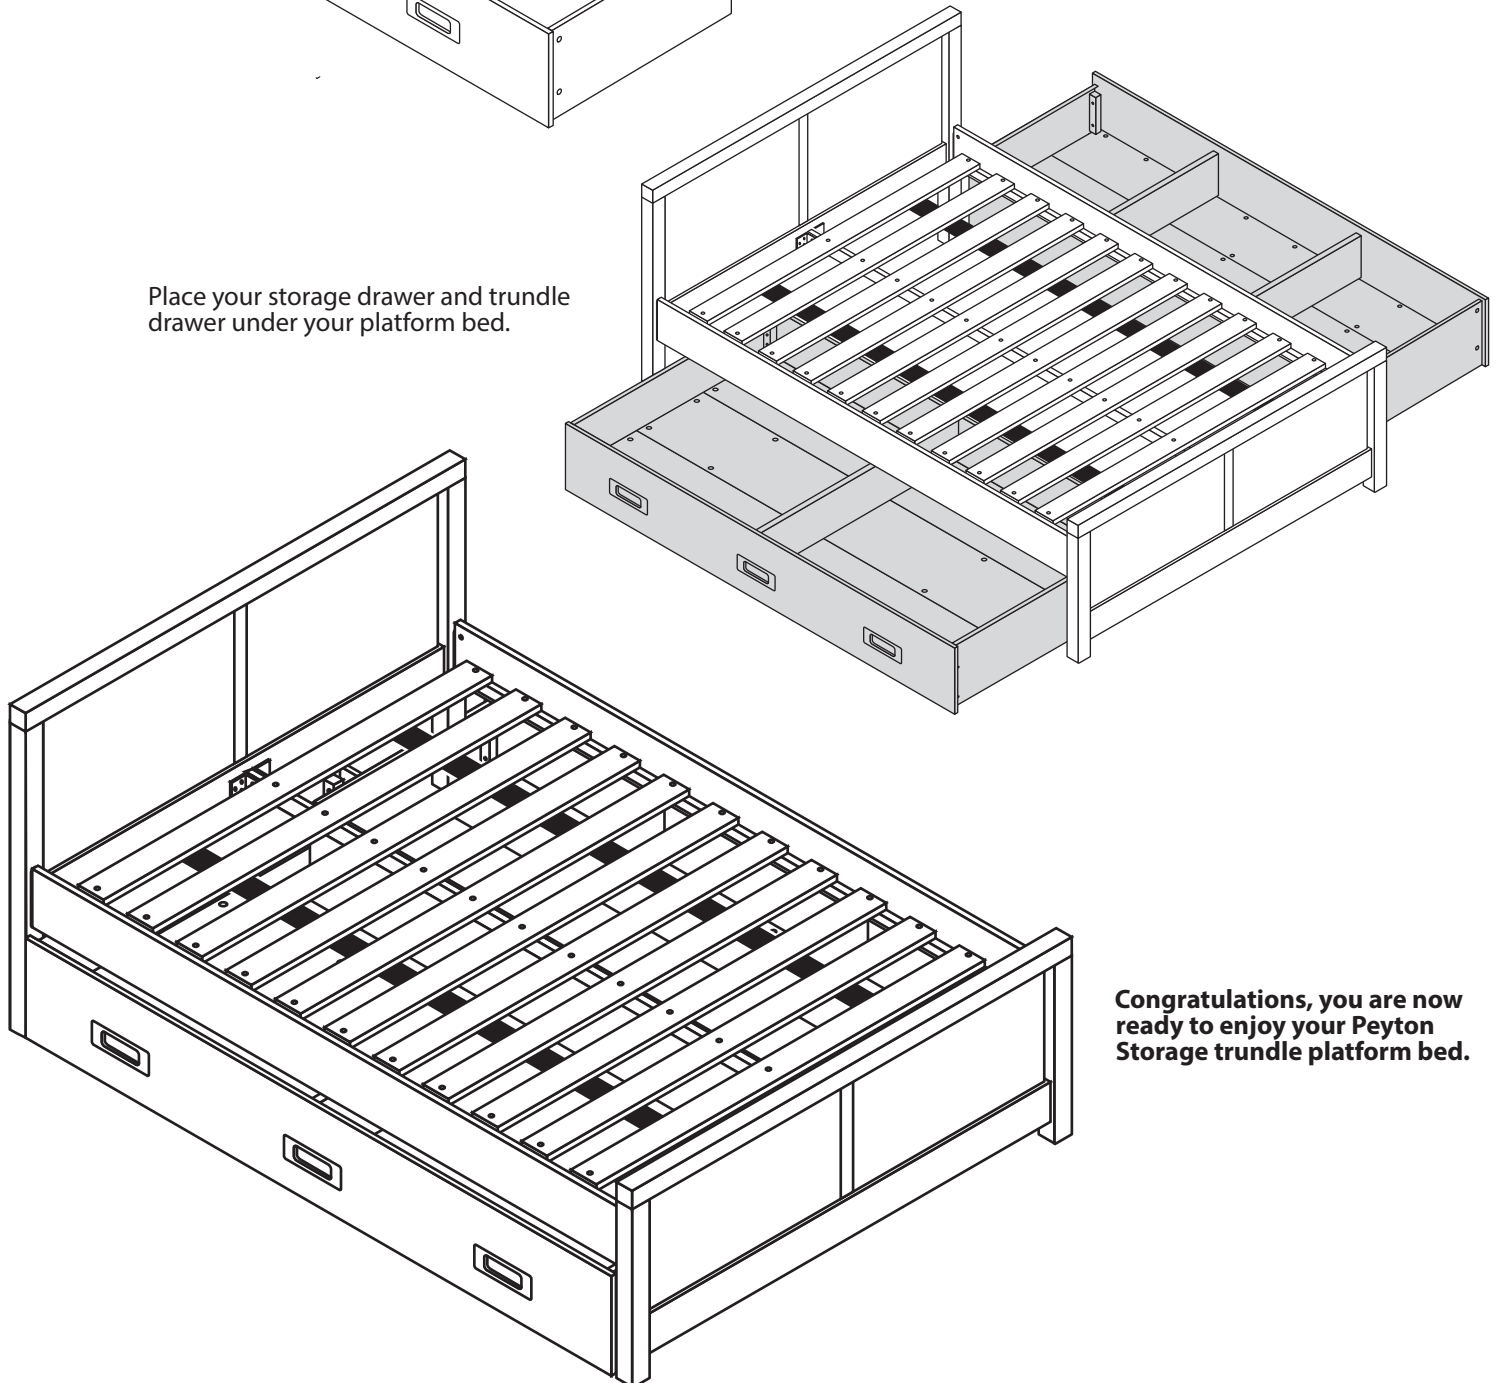

Congratulations, you are now ready to enjoy your Peyton Storage trundle platform bed.