

AMORE PLATFORM BED

5401 AM-QU-PB-BA, 5400 AM-KI-PB-BA,
5405 AM-FU-PB-BA


Congratulations on the purchase of your Amore Platform Bed. This bed has been crafted to the highest standards of quality and safety and will give you many years of enjoyment and practical use.

On this insert you will find a list of the hardware and platform bed parts as well as detailed assembly instructions. Assembly is quite simple and requires only a Phillips head screwdriver. The use of a power drill with Phillips head attachment is helpful but not necessary. Assembly will be most easily accomplished if you take the time to carefully sort the hardware and familiarize yourself with the function of each piece.


If you need assistance with assembly, part replacement or any other matter, please contact the toll-free Epoch Design Customer Service Team from Monday through Friday, 9 AM-6 PM PST at 1 (800) 589-7990. You may also email your request or comments to info@epochbydesign.com and a customer service representative will respond.

Thank you and Enjoy


HARDWARE LIST

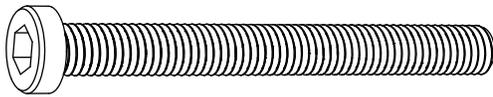

2x 60mm Bolts
Used to attach center support to drop foot



16x 15mm Bolts
Used to attach legs to bed




12x 15mm Machine Screws
Used to attach brackets



55x 25mm Wood Screws
Used to attach slat bundle to rails




1x Allen Wrench
Used to tighten bolts

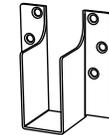


2x Brackets
Used to attach center support rail


Guide

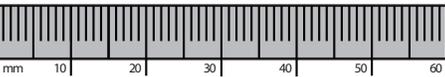

BED PARTS

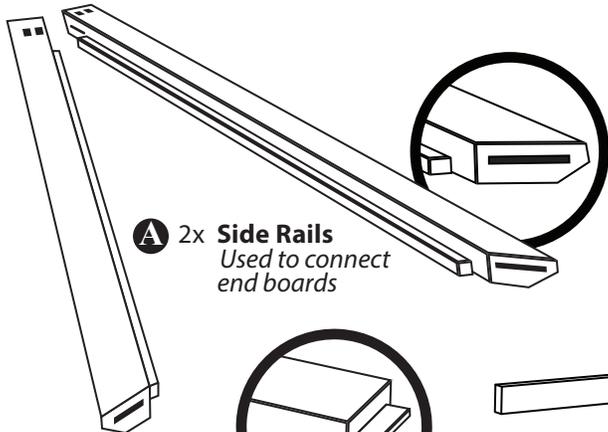



A 2x Side Rails
Used to connect end boards

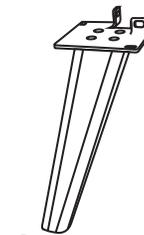


B 4x Legs



D 1x Headboard

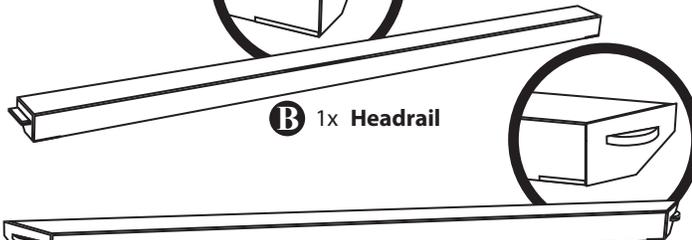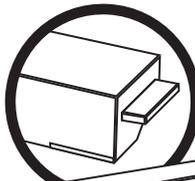

B 1x Headrail

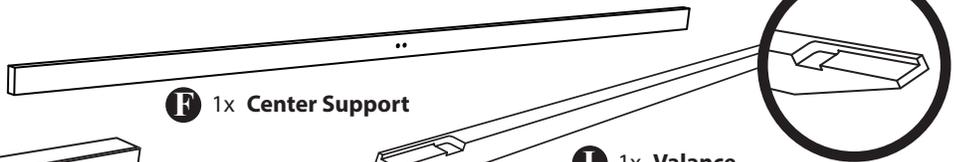


F 1x Center Support


I 1x Valance



C 1x Footboard

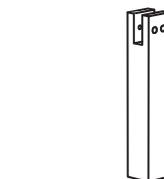

G 1x Drop Foot

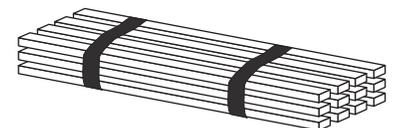

H 1x Slat Bundle
rest on side rails and supports mattress (strap side down)



HAVE QUESTIONS OR CONCERNS? CALL US FIRST: 1-800-589-7990

COPYRIGHT © 2019 EPOCH DESIGN™ ALL RIGHTS RESERVED

- ① Carefully place both side rails (A), headrail (B) and footboard (C) on a clean soft surface. Once in the correct position, gently slide the bamboo tenon on headrail (B) into the mortise slot on side rail (A). (Diagram I)

Repeat this step with the opposite side rail (A).

After both side rails have been affixed to headrail (B) slide the bamboo tenon biscuits on footboard (C) into the mortise slots on side rail (A). (Diagram II)

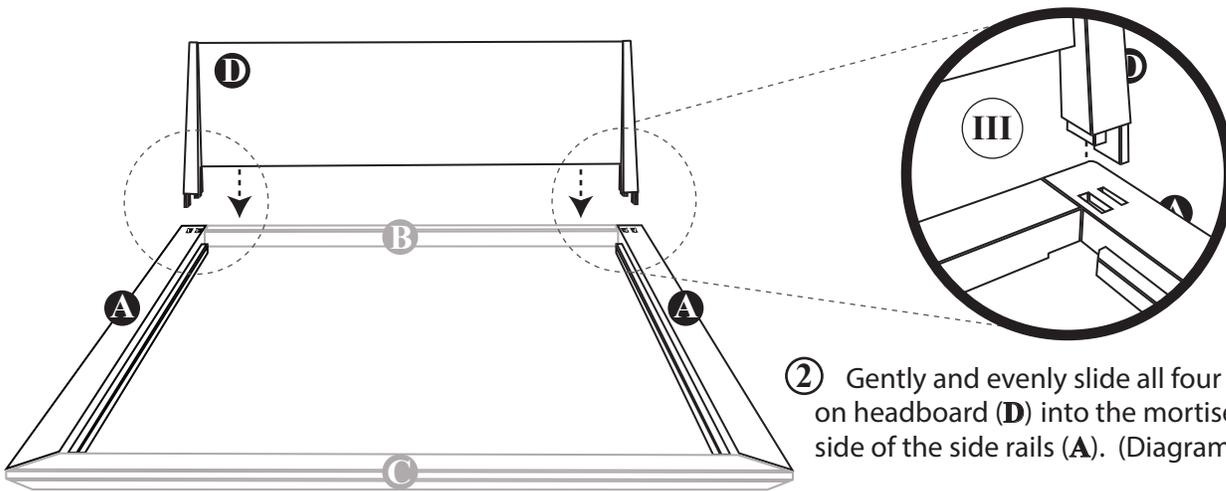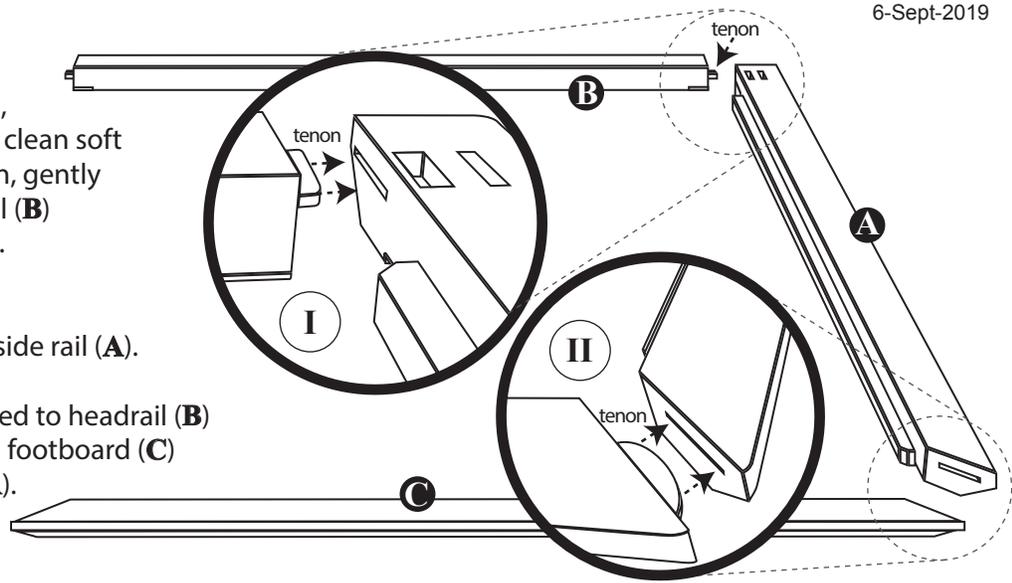


- ② Gently and evenly slide all four bamboo tenons on headboard (D) into the mortise slots on the top side of the side rails (A). (Diagram III)

***NOTE:** It may be necessary to tap on the top of the headboard uprights with a rubber hammer to fully seat the headboard into the rails.

- ③ Carefully tilt the bed frame upward by raising the footboard end (C) and insert the two legs (E) into the notched alcoves in the footboard (C) and the side rails (A).


Loosely attach the legs (E) to the bed frame by inserting two 15mm bolts through the raised bracket arms on the legs on the inside of the bed frame and finger tighten. (Diagram IV)

Then insert two 15mm bolts through the bottom of the leg brackets and into the footboard (C) and the side rails (A) and finger tighten. (Diagram IV)

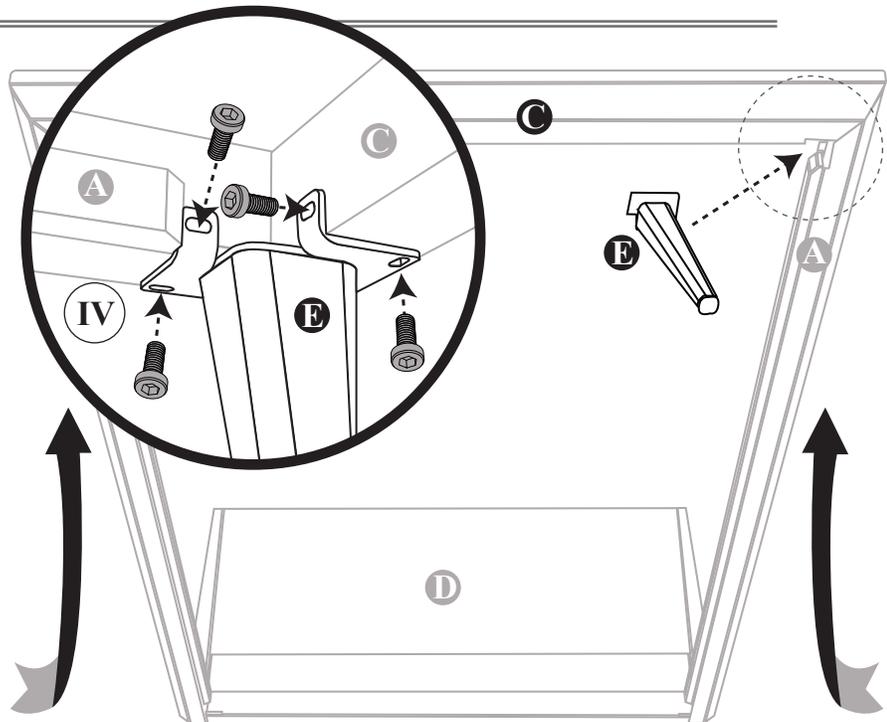

HAVE QUESTIONS OR CONCERNS? CALL US FIRST: 1-800-589-7990

COPYRIGHT © 2019 EPOCH DESIGN™ ALL RIGHTS RESERVED

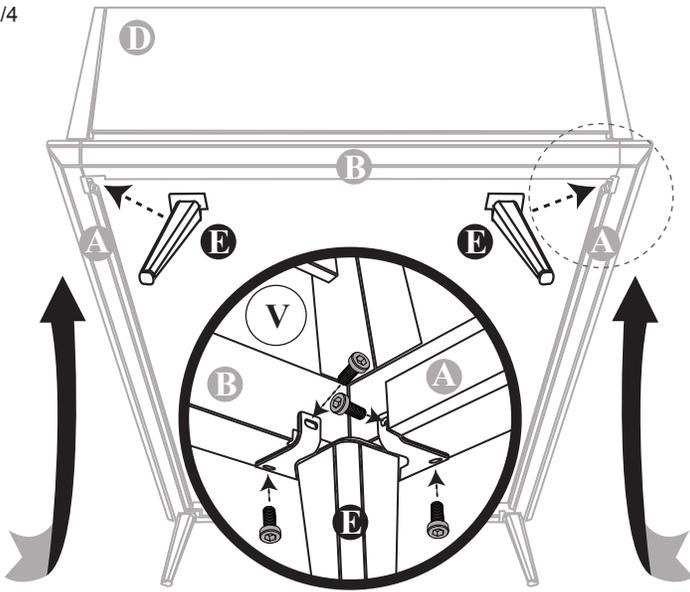


- ④ Lift the bed frame from the headboard end (D) and insert the two legs (E) into the notched alcoves in the headrail (B) and the side rails (A).

Loosely attach the legs (E) to the bed frame by inserting two 15mm bolts through the raised bracket arms on the legs on the inside of the bed frame and finger tighten. (Diagram V)


Then insert two 15mm bolts through the bottom of the leg brackets and into the headrail (B) and the side rails (A) and finger tighten. (Diagram V)

- ⑤ Using the 12 machine screws provided, attach the two steel center support brackets (open end up) to the foot and head board.

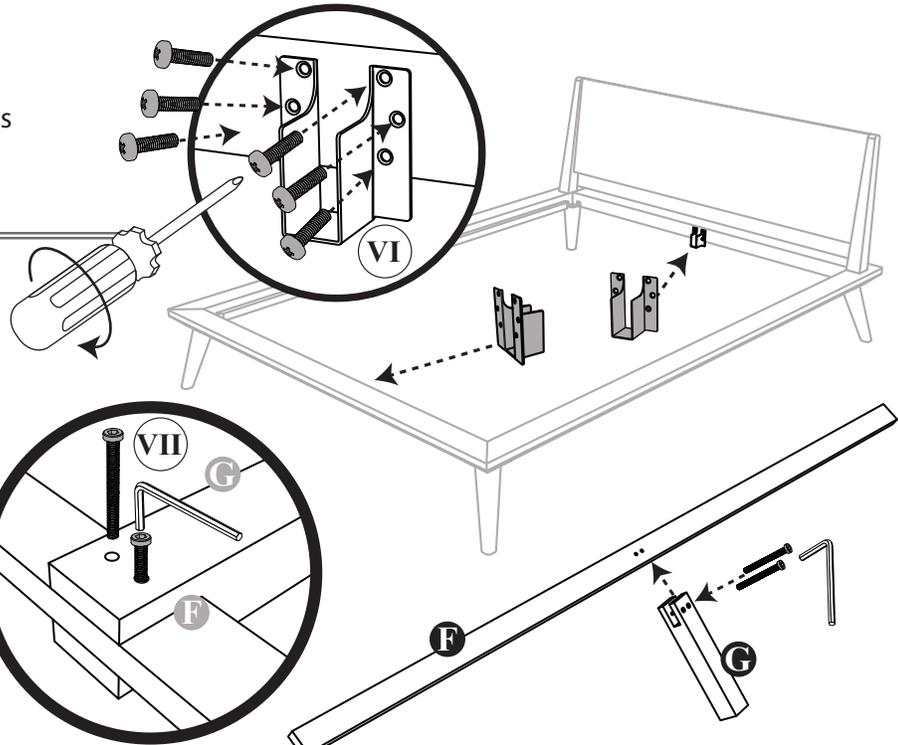

- ⑥ Attach the drop support to the center support by placing center support (F) into the slot on the top of the drop foot (G). Then insert two 60mm bolts into the non-threaded side of the drop foot (G), through the center support (F) and into the threaded inserts. Tighten with the Allen wrench provided. (Diagram VII)

- ④ Place the completed center support assembly into the center support brackets, then tighten all of the leg bolts with the Allen wrench provided.

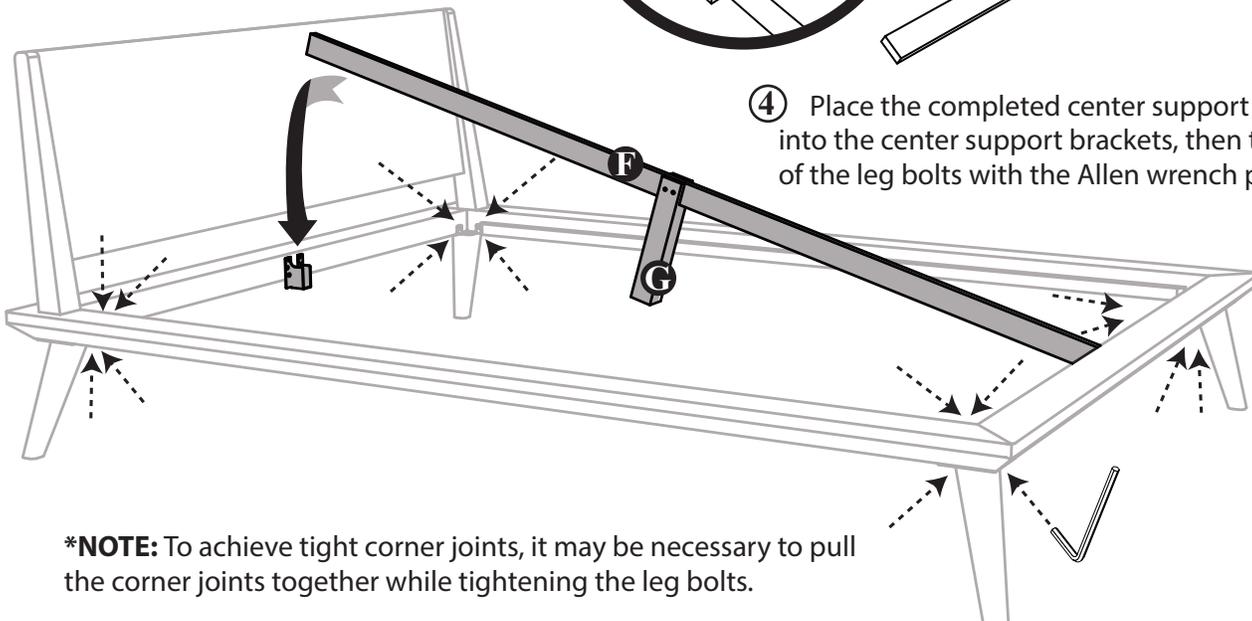

***NOTE:** To achieve tight corner joints, it may be necessary to pull the corner joints together while tightening the leg bolts.



HAVE QUESTIONS OR CONCERNS? CALL US FIRST: 1-800-589-7990

COPYRIGHT © 2019 EPOCH DESIGN™ ALL RIGHTS RESERVED


- ⑦ Unroll the slat bundle (H) strap side down on the side rail ledges (A).

Make sure all of the slats are distributed evenly across the length of the bed, then attach the end slats closest to the footboard to the side rail ledges using the 25mm wood screws and a Phillips head screwdriver or power drill with the clutch set to low.

Then attach the end slats closest to the headboard before continuing on to secure the remaining middle slats.

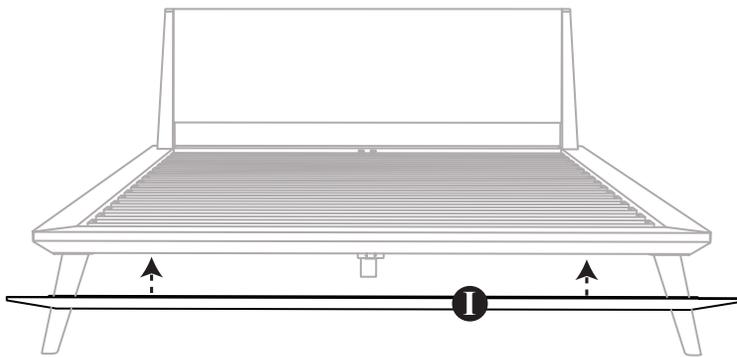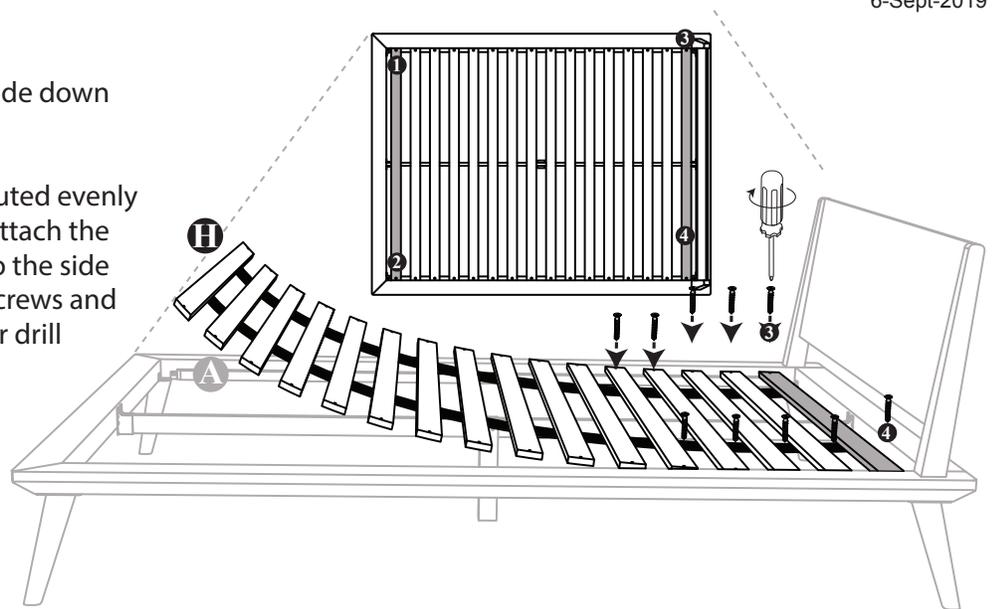


- ⑧ Attach the valance (I) to the front of the bed using seven 25mm wood screws with a Phillips head screwdriver or power drill with the clutch set to low.

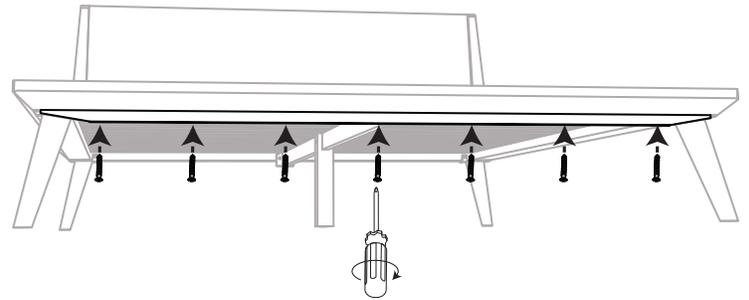

Congratulations, you have now completed the assembly of your Amore Platform Bed!

Simply place your favorite mattress on the slat rails and you are free to enjoy Epoch Design's traditional craftsmanship, quality bamboo construction and sustainable natural beauty for generations to come.

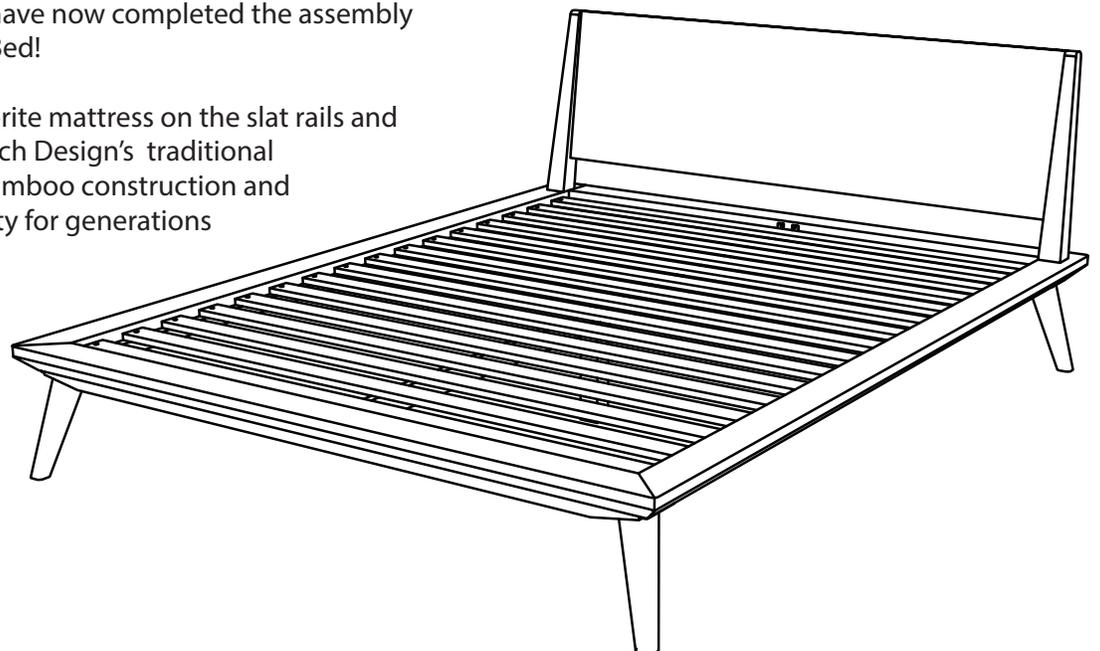

HAVE QUESTIONS OR CONCERNS? CALL US FIRST: 1-800-589-7990

COPYRIGHT © 2019 EPOCH DESIGN™ ALL RIGHTS RESERVED