

AMORE NIGHTSTAND


5403-AM-S-NS-BA

Congratulations on the purchase of your Amore nightstand. This nightstand has been crafted to the highest standards of quality and safety and will give you many years of enjoyment and practical use.


Since this nightstand is a natural bamboo product there will be variations in color and grain, and minor wood grain checking may occur. This is normal and does not compromise the integrity of your dresser. Variation in the character of this piece is integral to its beauty and distinguishes it from lower quality composite materials.

Assembly is quite simple and requires only a Phillips head screwdriver. The use of a power drill with Phillips head attachment is helpful but not necessary. Assembly will be most easily accomplished if you take the time to carefully sort the hardware and familiarize yourself with the function of each piece.


HARDWARE LIST

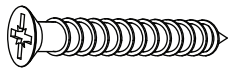


2x **25mm Wood Screws**
Used to attach
valance to nightstand

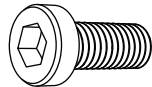

16x **15mm Bolts**
Used to attach
legs to nightstand



2x **35mm Machine Screws**
Used to attach drawer handle




1x **Drawer handle**
Used to open
drawer




1x **Allen Wrench**
Used to tighten bolts


Guide

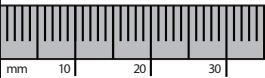


PARTS

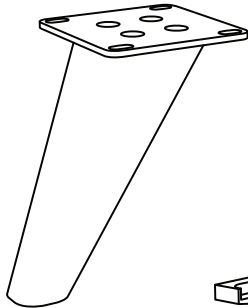

A 4x **Legs**

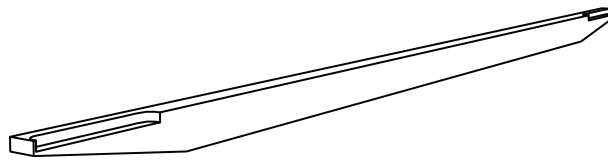

B 1x **Valance**

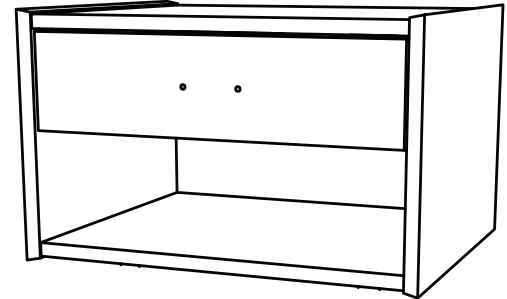

1x **Nightstand**


If you should require assistance with assembly, part replacement or any other matter, contact the toll-free Epoch Design Service Center from anywhere in the Continental United States, Monday through Friday, 9 AM – 5 PM Pacific Standard Time at 1-800-589-7990. You may also email your request or comments to info@epochbydesign.com and a service representative will respond.

Thank you and Enjoy


HAVE QUESTIONS OR CONCERNS? CALL US FIRST: 1-800-589-7990

COPYRIGHT © 2019 EPOCH DESIGN™ ALL RIGHTS RESERVED




- ① Carefully lay the nightstand on it's back on a clean soft surface. Once in the correct position, install the four outer legs (A) onto the bottom of the nightstand using four 15mm bolts per leg, tighten using the Allen wrench provided.

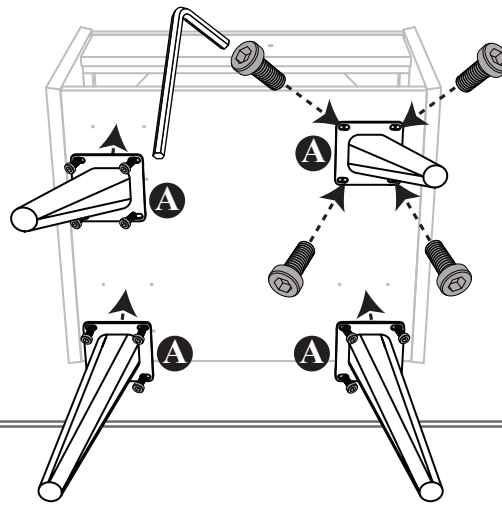

***NOTE:** Each leg bottom should point outward towards the nearest outer corner as illustrated.

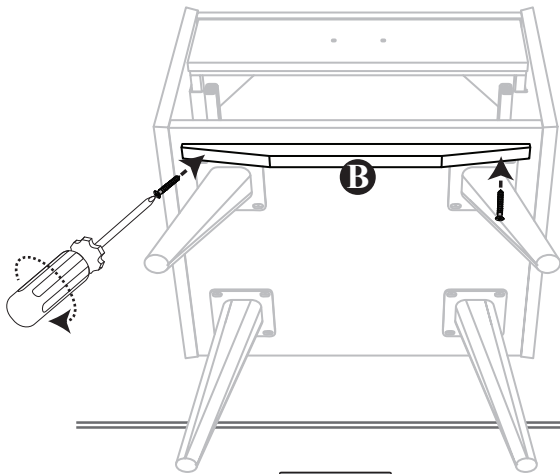

- ② Install the valance (B) on the bottom of the nightstand using the two 25mm wood screws and a Phillips head screw driver or a power drill with the clutch set to low, then return the nightstand to it's upright position.

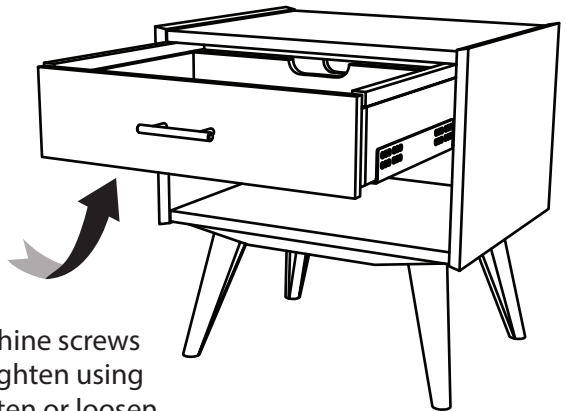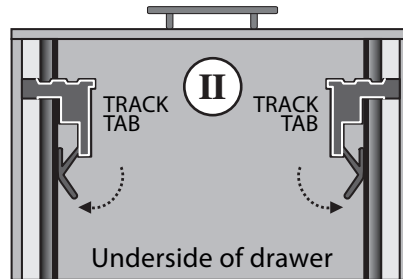
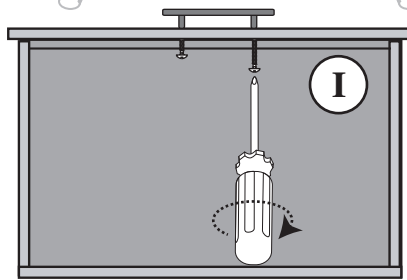


- ③ Place the handle on the outside of the drawer, insert the 35 mm machine screws through the pre-drilled holes located on the inside of the drawer and tighten using a Phillips head screwdriver. (Diagram I). Do not turn the handle to tighten or loosen the screws. Doing so will cause the handle to scratch the front of the drawer.

If you find you need to remove a drawer, push and hold the track tabs outward and pull the drawer the rest of the way out of it's drawer slide. (Diagram II).

The Amore collection also features a cord management boot in the back of each nightstand.

Simply run your power cable through drawer cradle and out of the back of your nightstand and you can conveniently charge your favorite electronics free from clutter.

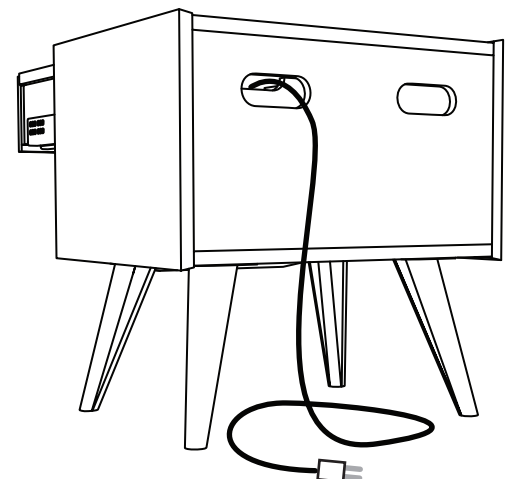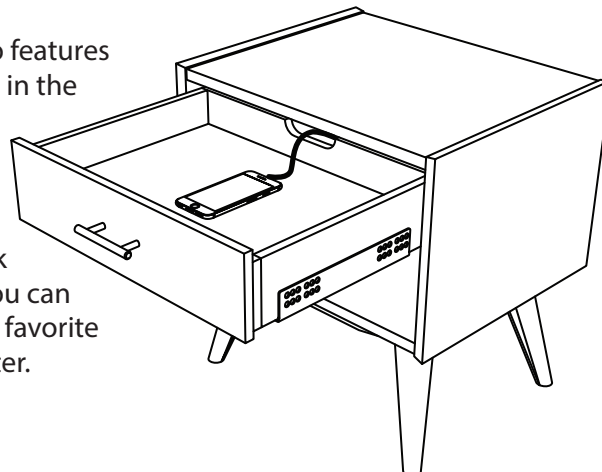

HAVE QUESTIONS OR CONCERNS? CALL US FIRST: 1-800-589-7990

COPYRIGHT © 2019 EPOCH DESIGN™ ALL RIGHTS RESERVED